

<b>1200900026</b>	WW-90	8 Lt.
<b>1200900029</b>	WW-98	11 Lt.

<i>I</i>	Pompa elettrica a pistoni carrellata, mod: WW-90 WW-98.	
<i>GB</i>	Piston electric pump with carriage mod: WW-90 WW-98.	
<i>E</i>	Bomba electrica de pistones con carrito mod: WW-90 WW-98.	
<i>F</i>	Pompe électrique à pistons sur roues, mod: WW-90 WW-98.	



<b>1200900023</b>	WW-90	8 Lt.
<b>1200900024</b>	WW-98	11 Lt.

<i>I</i>	Pompa elettrica a pistoni staffata al telaio mod. "WW-90" - "WW-98".	
<i>GB</i>	Piston electric pump with clamp for the frame hooking mod. "WW-90" - "WW-98".	
<i>E</i>	Bomba lectrica de pistones con estribo de ataque a el teiar mod. "WW-90" - "WW-98".	
<i>F</i>	Pompe électrique à pistons fixée par étrier au châssis mod: "WW-90" - "WW-98".	



<b>1200900032</b>	WW-90	8 Lt.
<b>1200900033</b>	WW-90	11 Lt.

<i>I</i>	Pompa elettrica a pistoni staffata al telaio mod: WW-90 - WW-98 con pressostato di sicurezza.	
<i>GB</i>	Piston electric pump with clamp for the frame hooking mod. WW-90 - WW-98 with safety pressostato.	
<i>E</i>	Bomba lectrica de pistones con estribo de ataque a el teiar mod WW-90 - WW-98 con pressostato de seguridad.	
<i>F</i>	Pompe électrique à pistons fixée par étrier au châssis mod: "WW-90" - "WW-98" avec pressostat de sûreté.	

